


SNAPPER®


**21" REAR DISCHARGE
CAST ALUMINUM
(SINGLE POINT HEIGHT OF CUT)
XP21551V & XP21501KWV
SELF-PROPELLED MODELS
*SERIES 1**

***NOTE: THE SERIES NUMBER
IS THE LAST NUMBER
IN THE DIGIT MODEL
DESIGNATION.**

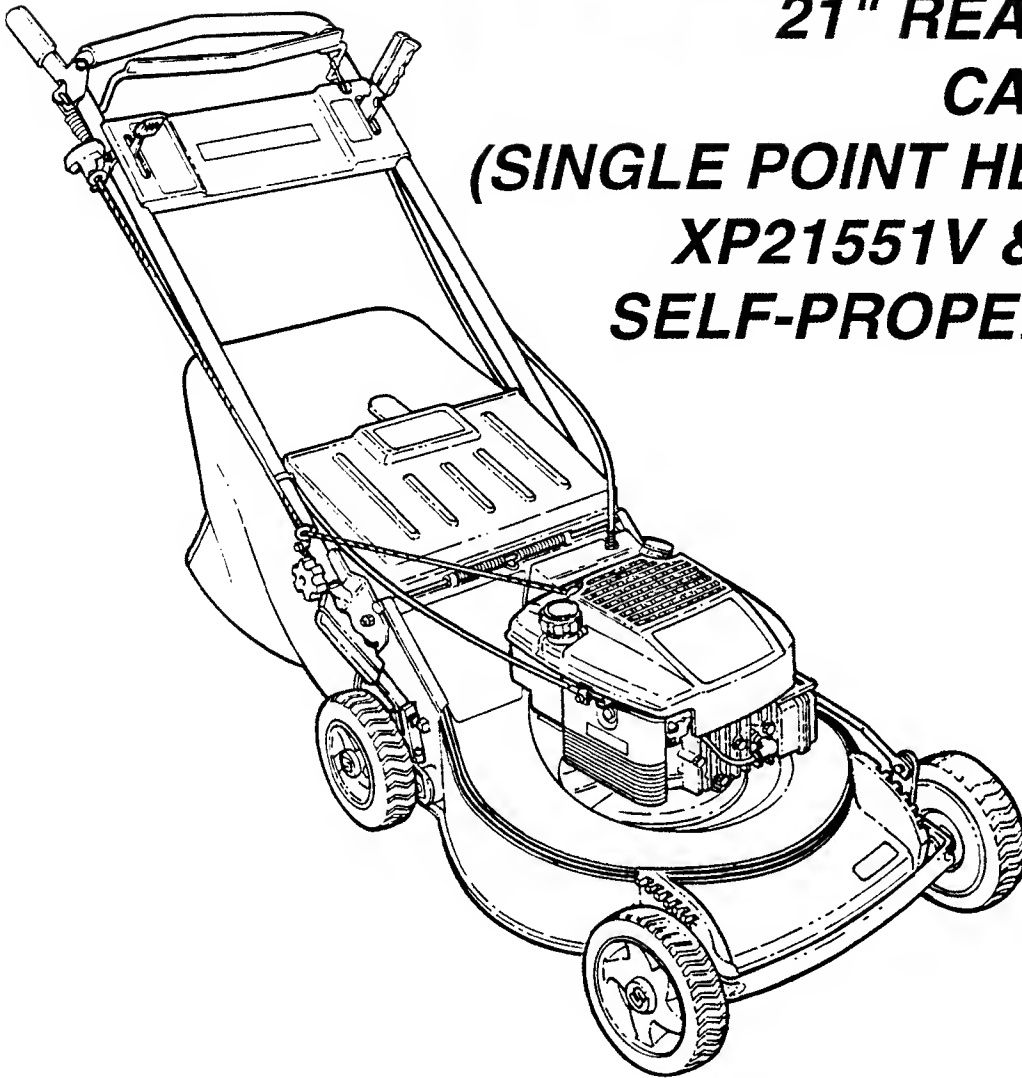


INDEX - GROUP	PAGE(S)
HANDLES & CONTROLS	2 - 3
ENGINE, CUTTING DECK, BLADE	4 - 5
DRIVE SYSTEM COMPONENTS	6 - 7
DECK LIFT COMPONENTS	8 - 9
TRANSMISSION (DIFFERENTIAL)	10 - 11
FRONT & REAR WHEELS	12
GRASS BAG COMPONENTS	13
DECALS	14 - 15

HANDLES & CONTROLS

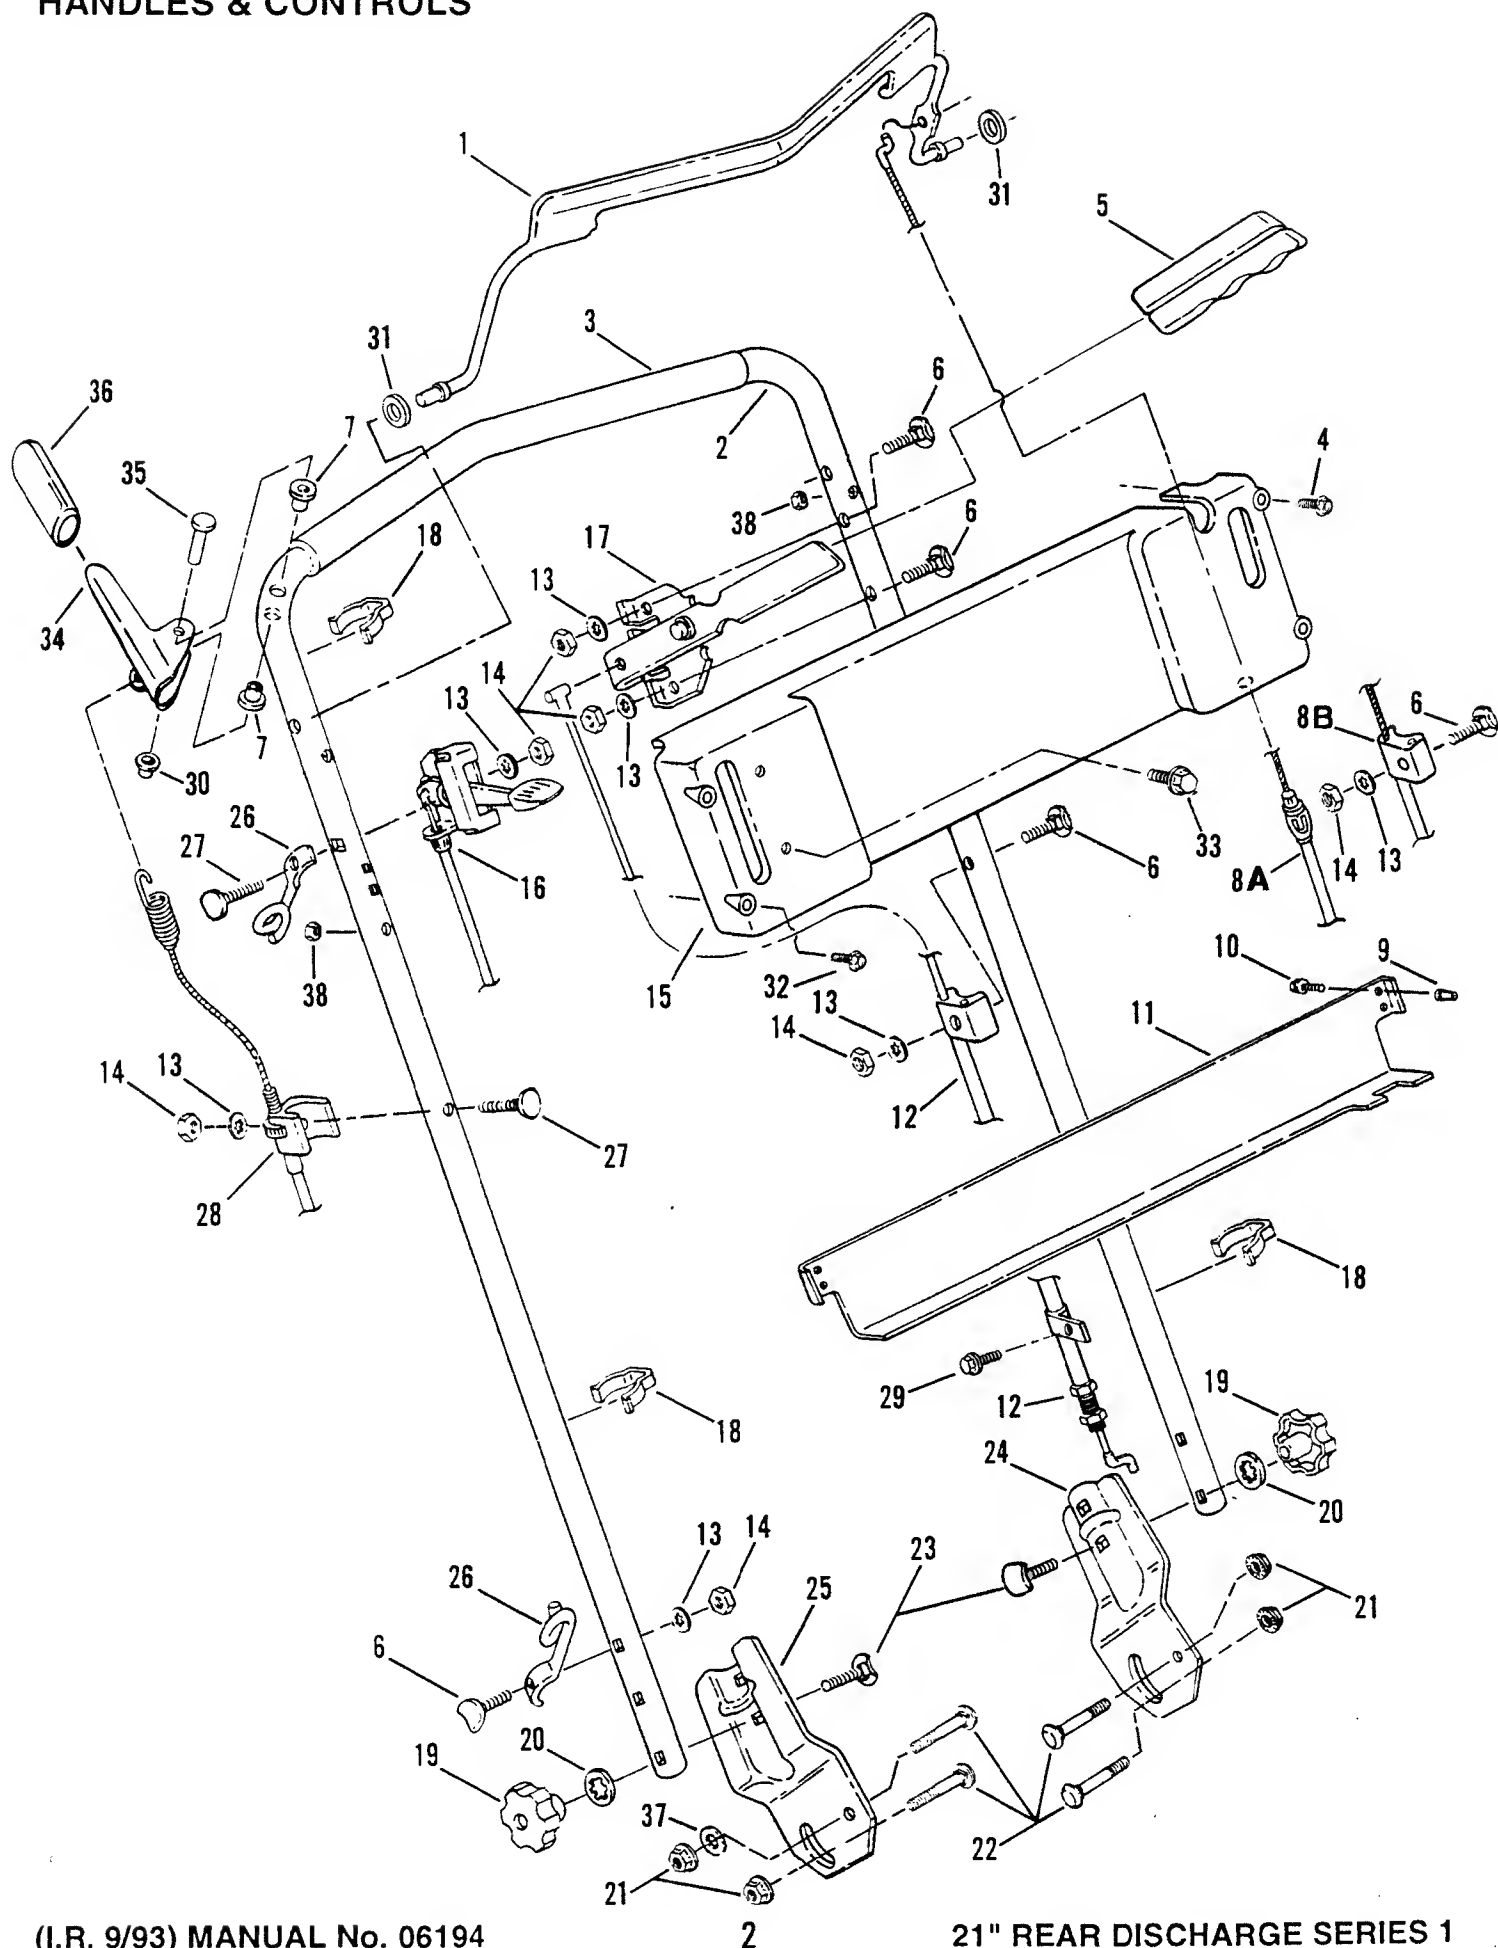


ITEM	PART NO.	DESCRIPTION
1	2-6539	CONTROL, Blade
2	3-3717	HANDLE, Upper
3	2-6216	GRIP, Upper Handle (Foam)
4	9-1266	SCREW, #10-24 x 2" Self-Tapping (2) (Gr. 5)
5	2-6420	GRIP, Speed Selector
6	1-6242	BOLT, 1/4-20 x 1-1/2" Curved Head Carriage (4 each for Briggs) (5 each for Kawasaki)
7	1-4343	BUSHING (2)
8A	2-6200	CABLE, Blade Control (Briggs Engine)
8B	2-7938	CABLE, Blade Control (Kawasaki Engine)
9	9-1182	INSERT, Nylon (4)
10	9-1195	SCREW, #10 x 3/4" Self-Tapping (4)
11	3-3928	BRACE, Control Panel
12	2-6201	CABLE, Speed Selector
13	9-1023	WASHER, 1/4 Internal Tooth Lock (6)
14	9-1100	NUT, 1/4-20 Hex (6)
15	5-3200	KIT, Console Panel (Includes Items 4, 32, 38, #2-8050 Console Panel & Decals)
16	2-5039	CONTROL, Throttle (Briggs Engine)
--	2-7409	CONTROL, Throttle (Kawasaki Engine)
17	5-3161	ASSEMBLY, Speed Selector Quadrant
18	2-3813	CLIP, Cable (3)
19	2-3735	KNOB, 5/16-18 Internal Thread (2)
20	9-0391	WASHER, 5/16 Internal Tooth Lock (2)
21	9-1070	NUT, 5/16-18 Hex Flange Lock (4)
22	9-0978	BOLT, 5/16-18 x 1-1/4" Carriage (4)
23	9-1189	BOLT, 5/16-18 x 2" Curved Head Carriage (2)
24	3-3647	BRACKET, Handle (Left Hand)
25	3-3646	BRACKET, Handle (Right Hand)
26	2-2779	GUIDE, Rope (2)
27	9-1225	BOLT, 1/4-20 x 1-7/8" Curved Head Carriage
28	2-6202	ASSEMBLY, Clutch Cable
29	9-1084	SCREW, 1/4-20 x 3/8" Self-Tapping
30	9-1020	NUT, 1/4" Push
31	9-1076	WASHER, 5/16 Flat (2)
32	9-1265	SCREW, #10-24 x 1-1/2" Self-Tapping (2) (Gr. 5)
33	9-0913	SCREW, #10-24 x 1/2" Self-Tapping (Torx Head) (2)
34	3-3910	LEVER, Wheel Drive
35	2-3792	PIN, 1/4 x 1-1/2" Clevis
36	1-4307	GRIP, Wheel Drive Lever
37	9-1130	WASHER, 5/16 Flat (4)
38	9-1267	NUT, #10-24 Hex Center Lock (4)

ENGINE, CUTTING DECK, BLADE

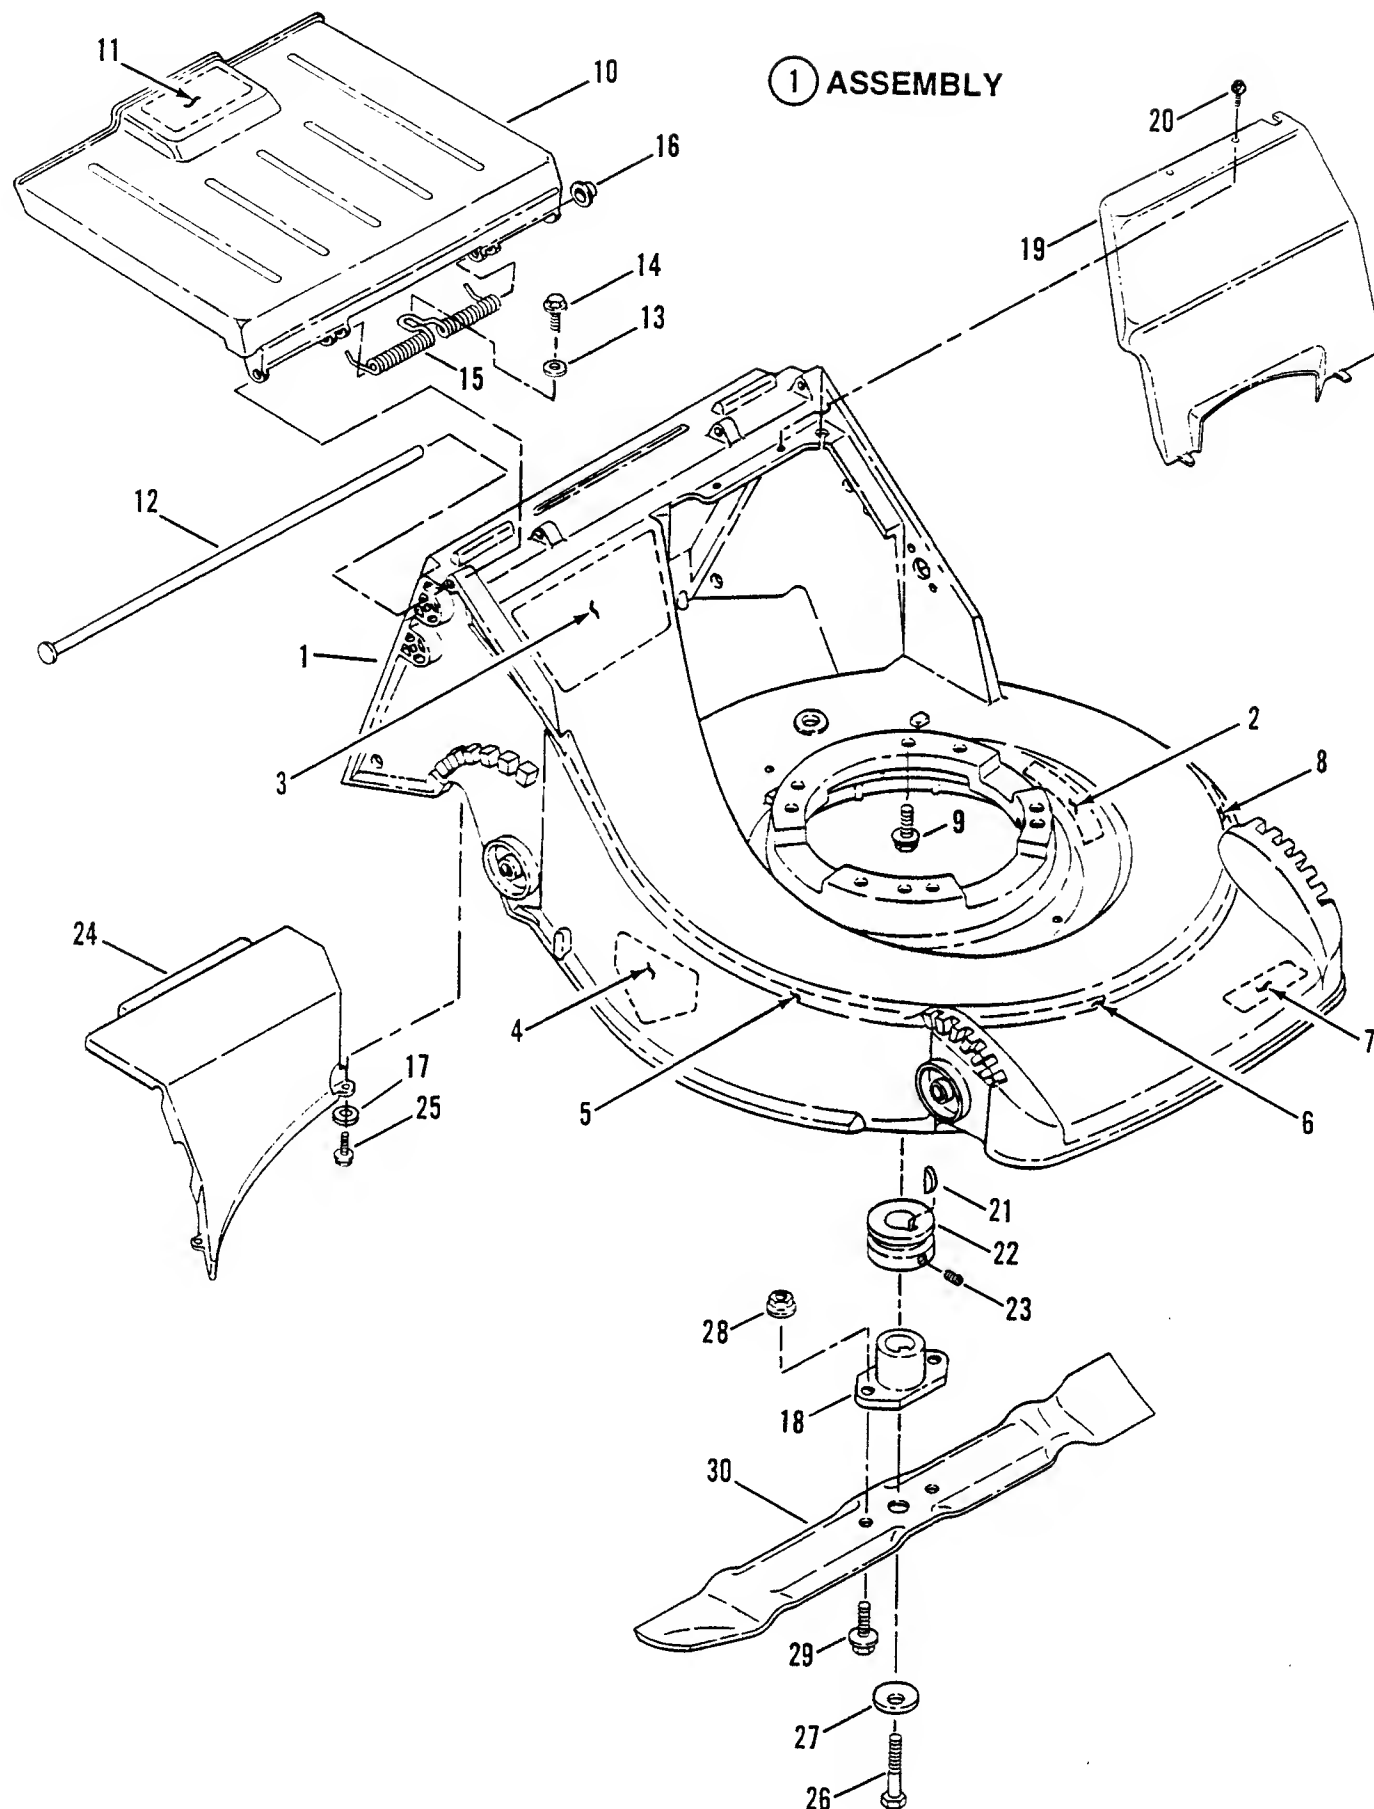

ITEM	PART NO.	DESCRIPTION
1	5-3328	ASSEMBLY, Deck & Decals (Includes items 2 thru 8)
2	2-6713	DECAL, WARNING
3	2-6561	DECAL, Mulching Convertible
4	1-3010	DECAL, DANGER
5	2-6508	DECAL, Stripe (Right Hand Side)
6	2-6506	DECAL, Stripe (Front)
7	2-6582	DECAL, SNAPPER, Mulching Convertible
8	2-6507	DECAL, Stripe (Left Hand Side)
9	9-0324	SCREW, 3/8-16 x 1" Self-Tapping (Engine Mounting) (3)
10	5-3199	ASSEMBLY, Door/Decal (Includes item 11)
11	2-6541	DECAL, Quick Change Convertible
12	2-6105	ROD, Door Hinge
13	9-0055	WASHER, 1/4 Flat
14	9-1231	SCREW, #10-16 x 5/8" Self-Tapping
15	2-6139	SPRING, Torsion
16	1-2542	NUT, 5/16 Push
17	9-1253	WASHER, 1/4 Flat
18	2-6631	HUB, Blade Drive (Briggs Engine)
--	2-6630	HUB, Blade Drive (Kawasaki Engine)
19	2-4527	COVER, Drive
20	9-0913	SCREW, #10-24 x 1/2" Self-Tapping (Torx) (2)
21	1-5894	KEY, 3/16 x 5/16" #605 Woodruff (Briggs Engine)
--	1-0783	KEY, 5/32 x 5/8" #505 Woodruff (Kawasaki Engine) (2)
22	1-5780	PULLEY, Engine (Briggs Engine)
--	2-1764	PULLEY, Engine (Kawasaki Engine)
23	9-0201	SETSCREW, 5/16-18 x 5/16" Hex Socket
24	2-4740	BAFFLE, Rear
25	9-0999	SCREW, 1/4-20 x 5/8" Truss Head (Torx) (4)
26	9-0167	SCREW, 3/8-24 x 2" Hex Head Cap (Gr. 5) (Briggs Engine)
--	9-0483	SCREW, 3/8-24 x 1-3/4" Hex Head Cap (Gr. 5) (Kawasaki Engine)
27	7-9268	WASHER, 3/8 Split Lock
28	7-6979	NUT, 3/8-16 Hex Top Lock (2) (Briggs Engine)
--	9-0613	NUT, 3/8-16 Hex Flange Lock (2) (Kawasaki Engine)
29	9-0143	SCREW, 3/8-16 x 1-1/4" Hex Head Cap (2) (Briggs Engine)
--	9-0582	BOLT, 3/8-16 x 1" Hex Flange Lock (2) (Kawasaki Engine)
30	2-6427	BLADE, 21" Cutter
--	2-7399	ENGINE, 5.5 HP Briggs & Stratton (Not Shown)
--	2-6874	ENGINE, 5.0 HP Kawasaki (Not Shown)


DRIVE SYSTEM COMPONENTS

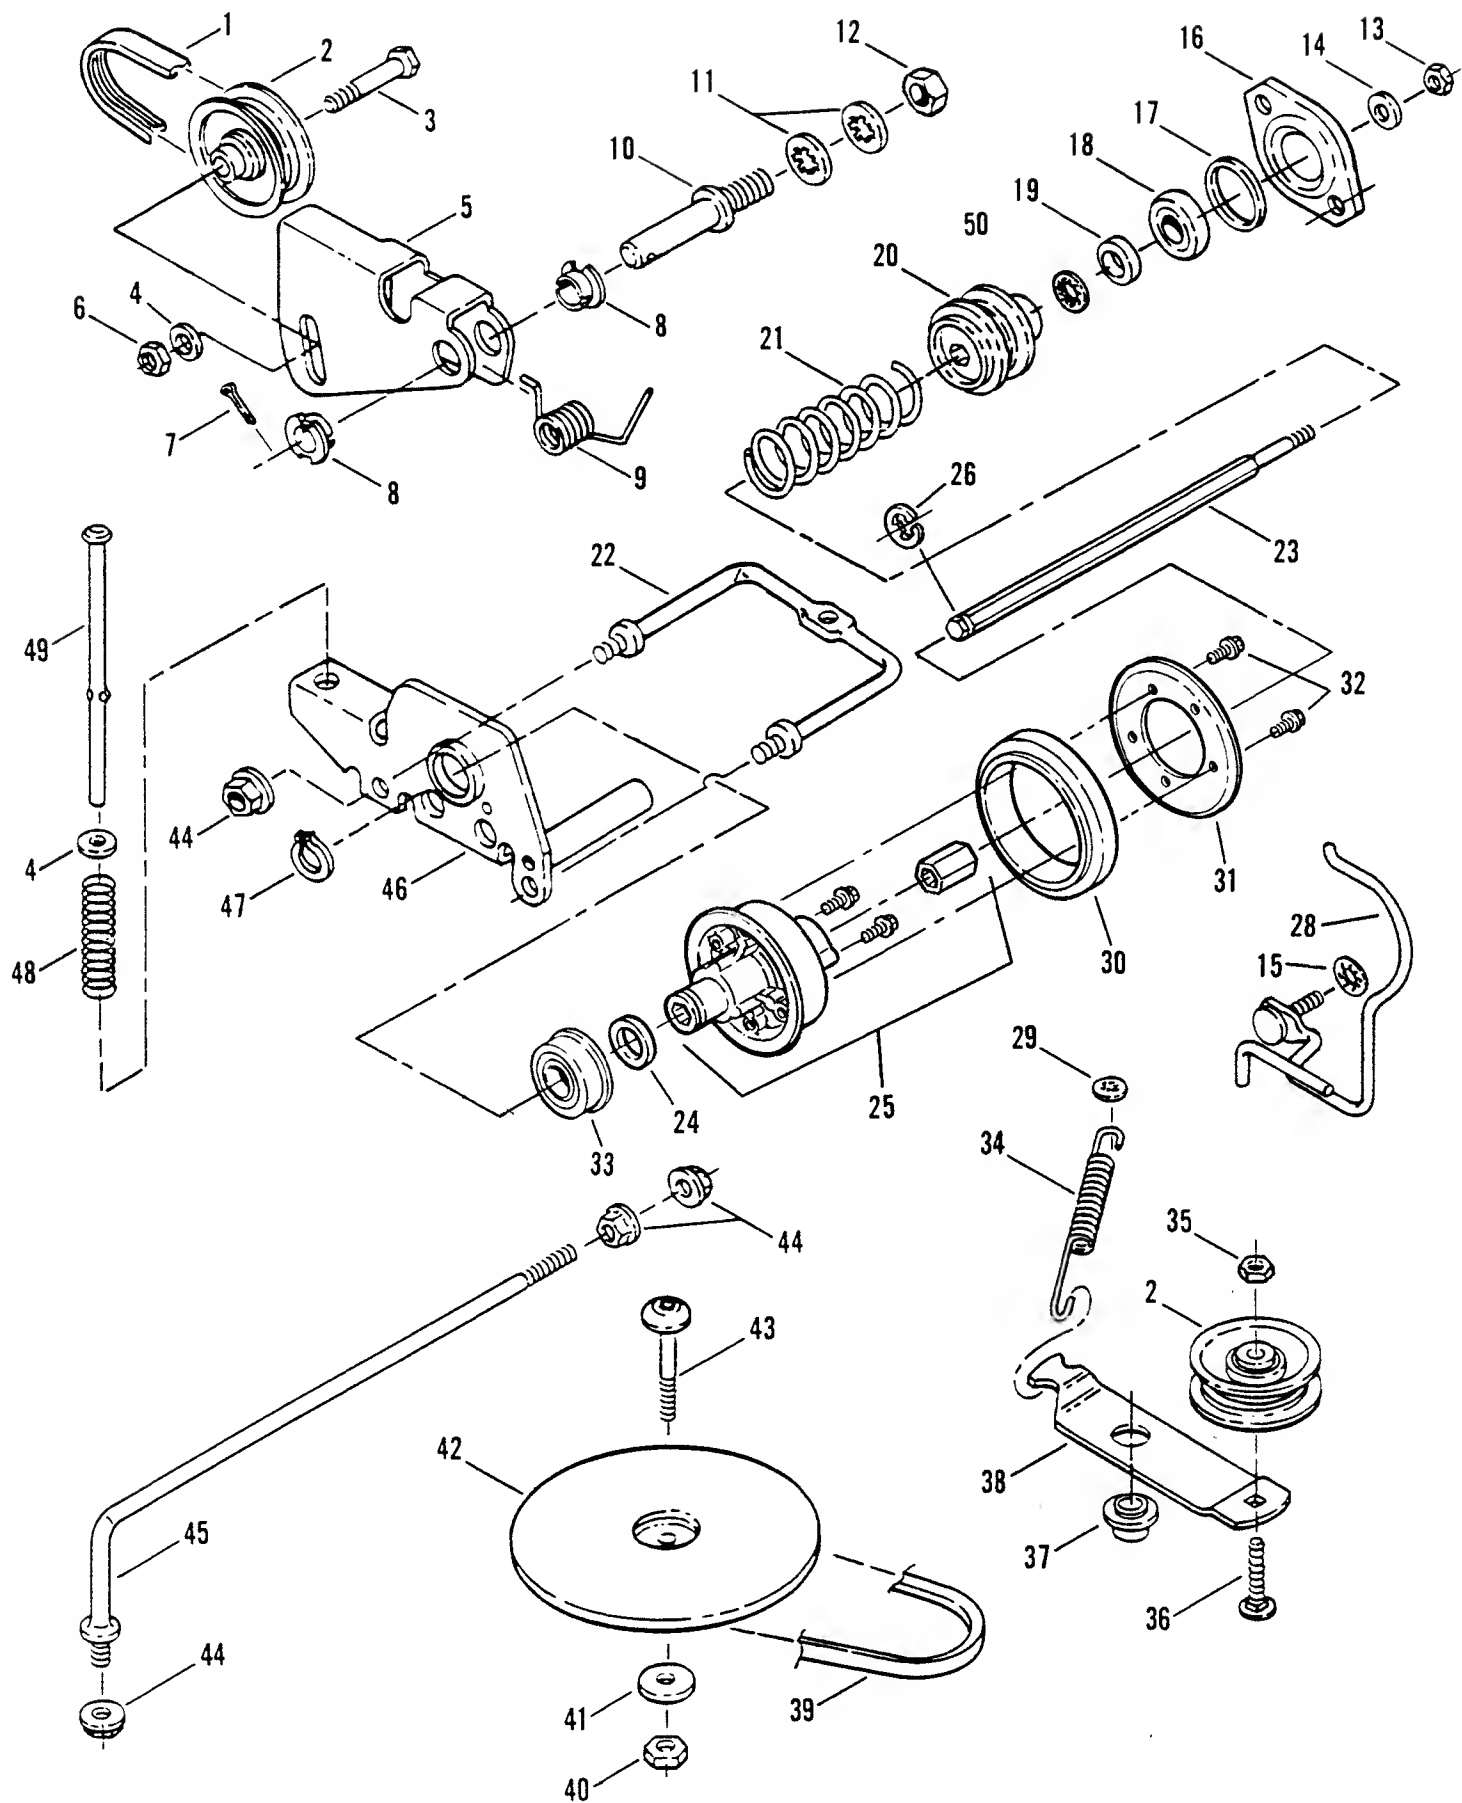

DRIVE SYSTEM COMPONENTS


ITEM	PART NO.	DESCRIPTION
1	2-4934	BELT, Poly-V
2	1-2124	PULLEY, Idler (2)
3	9-0552	SCREW, 1/4-28 x 1-3/8" Hex Head Cap
4	9-0055	WASHER, 1/4 Flat (2)
5	3-3681	ARM, Idler
6	9-0303	NUT, 1/4-20 Hex Top-Lock
7	9-0555	PIN, 3/32 x 1/2" Cotter
8	1-2117	BUSHING, Idler Arm (2)
9	2-6416	SPRING, Idler Arm
10	2-6181	STUD, 3/8 x 2-1/8"
11	9-0390	WASHER, 3/8 Internal Tooth Lock
12	9-0155	NUT, 3/8-24 Hex
13	9-1215	NUT, 3/8-24 Hex Center Lock
14	1-2316	WASHER, Flat
15	9-1023	WASHER, 1/4 Internal Tooth Lock
16	3-3699	RETAINER, Bearing
17	1-1025	O-RING
18	1-2304	BEARING
19	2-6378	SPACER
20	2-4521	PULLEY
21	2-6124	SPRING, Return
22	2-4617	GUIDE
23	2-4520	SHAFT, Hex Drive
24	1-0121	WASHER, Shim
25	5-3217	ASSEMBLY, Hub (Includes one 1-1108 Bushing & two 9-0913 Screws)
26	1-4341	RING, Retaining
27	9-1065	NUT, 1/4-20 Hex Flange Lock
28	4-1573	GUIDE, Belt (Front)
29	1-1791	RETAINER, 5/16 Bolt
30	2-3364	RING, Driven
31	3-1013	PLATE, Pivot
32	9-0913	SCREW, #10-24 x 1/2" Self-Tapping (5)
33	2-6693	BEARING
34	1-7326	SPRING, Idler Arm
35	9-0977	NUT, 1/4-20 Hex Jam
36	9-1181	BOLT, 1/4-20 x 1-1/8" Flat Head Carriage
37	2-6473	SPACER, Idler Arm
38	3-3932	ARM, Idler
39	1-2353	BELT, Engine Drive
40	9-1262	NUT, 7/16-14 Hex Flange Center Lock
41	9-1236	WASHER, Flat
42	5-2925	ASSEMBLY, Drive Disc
43	2-4529	SCREW, 7/16-14 x 2" Torx Head
44	9-1070	NUT, 5/16-18 Hex Flange Lock (5)
45	2-4996	ROD, Guide
46	5-3035	ASSEMBLY, Thrust Plate (Includes item 33)
47	1-0746	RING, Retaining
48	1-4432	SPRING, Plunger Rod
49	2-6131	ROD, Plunger
50	1-3946	RETAINER, 5/16 Bolt

DECK LIFT COMPONENTS

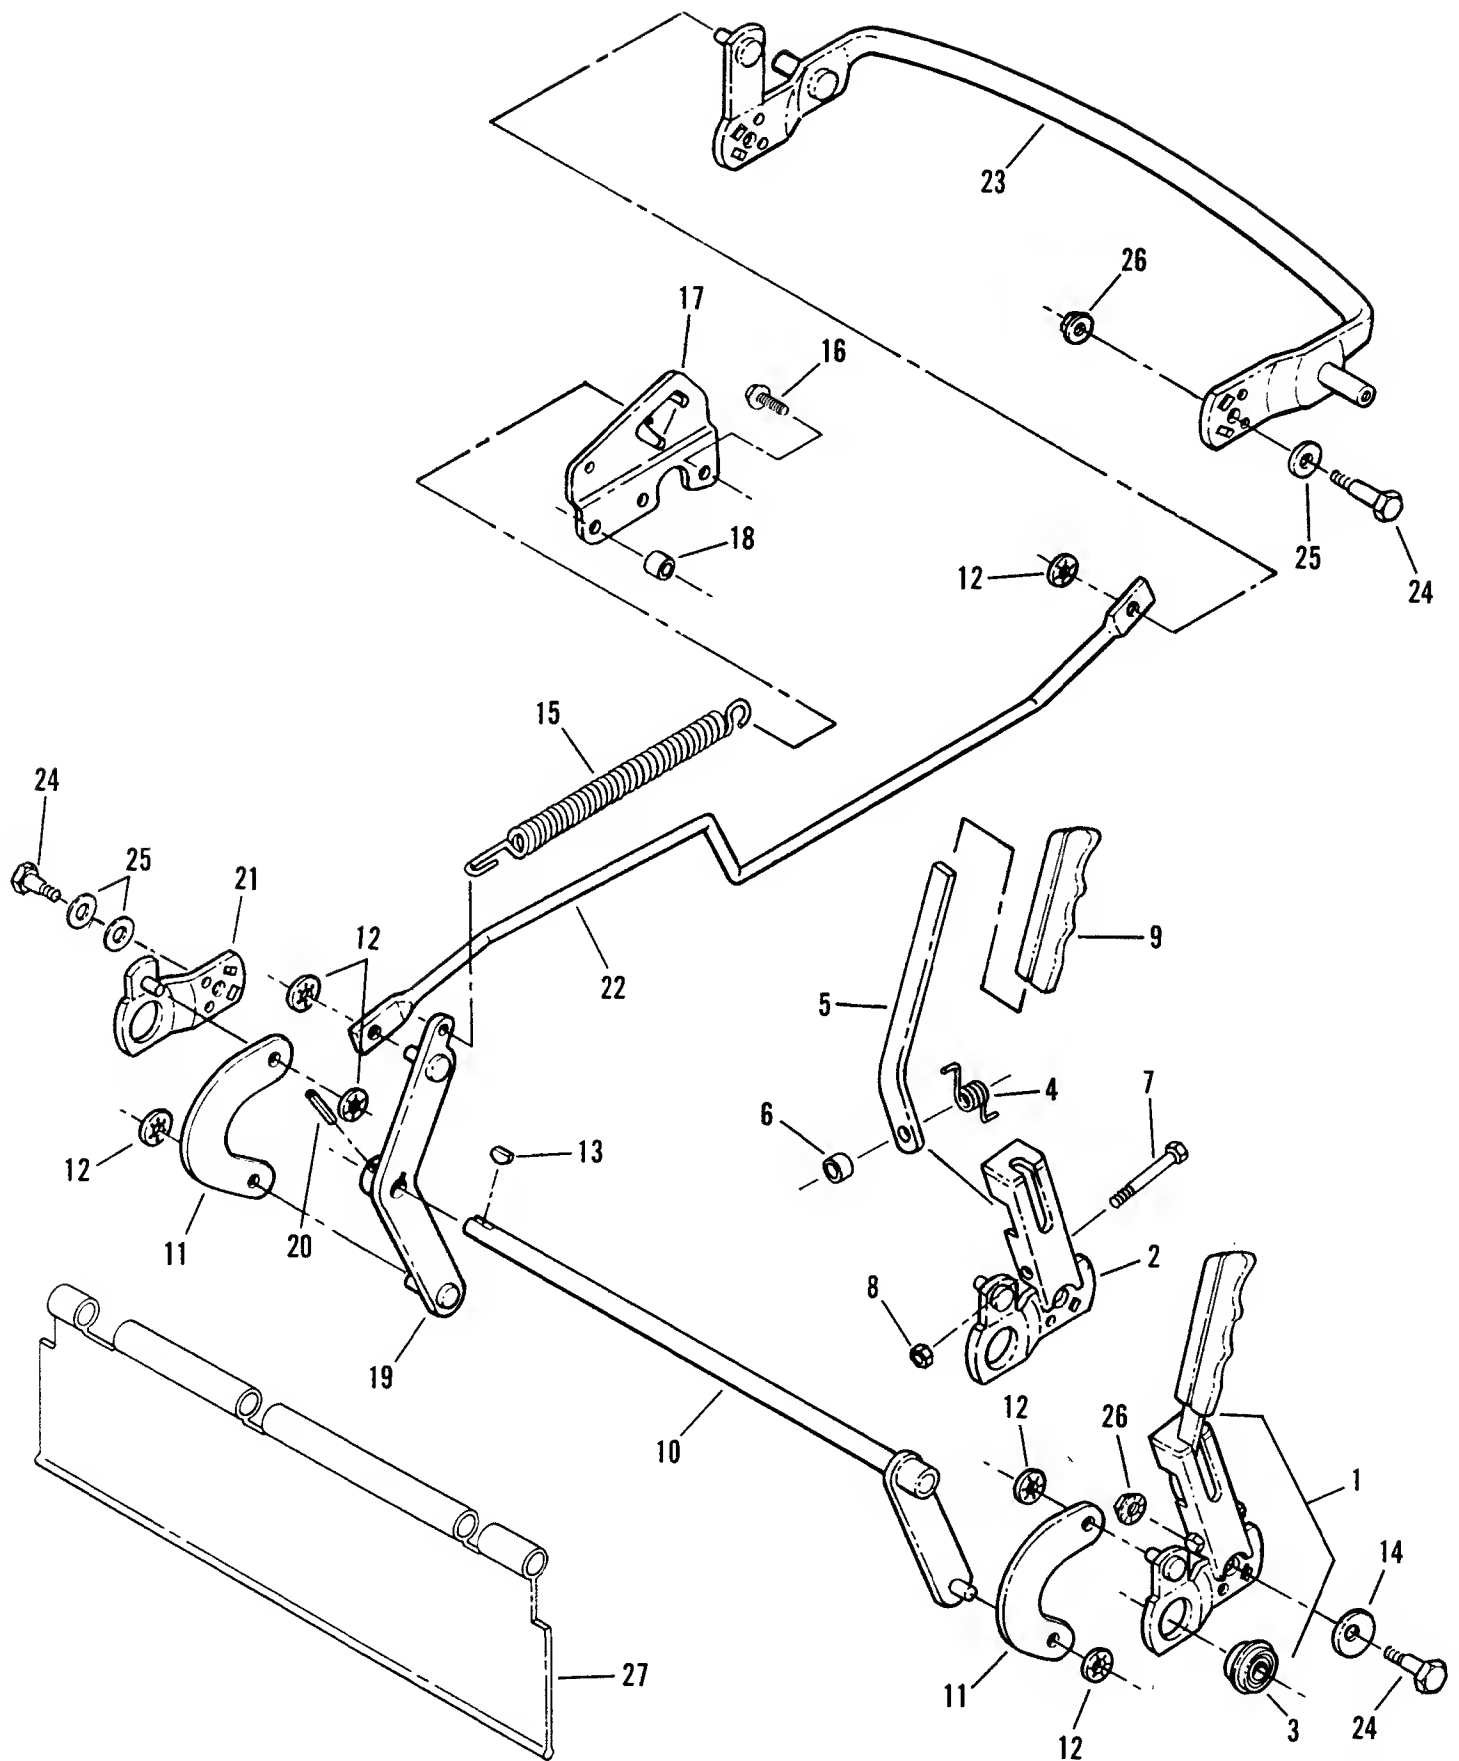

ITEM	PART NO.	DESCRIPTION
1	5-3327 5-3326	ASSEMBLY, Wheel Arm Height Lever (Includes Items 2 thru 8) ASSEMBLY, Wheel Arm/Bearing (Right Hand) (Includes Item 3 & 4)
2	4-1593	WELDMENT, Wheel/Arm
3	2-6544	BEARING
4	2-8019	SPRING, Torsion Return
5	3-4110	HANDLE, Lift
6	2-8018	SPACER
7	7-6937	SCREW, 5/16-18 x 2" Hex Head Cap
8	9-1067	NUT, 5/16-18 Hex Center Lock
9	2-6420	GRIP, Handle
10	4-1526	WELDMENT, Rear Link (Right Hand)
11	3-3976	LINK, Intermediate Rear (2)
12	1-3946	RETAINER, 3/8 Wheel (6)
13	1-0783	KEY, 5/32 x 5/8" #505 Woodruff
14	2-7962	WASHER, 1/2 Belleville
15	2-6788	SPRING, Extension
16	9-1254	SCREW, 1/4-20 x 7/8" Self-Tapping (Torx) (3)
17	3-4061	BRACKET, Spring
18	2-7922	SPACER
19	4-1525	WELDMENT, Rear Link (Left Hand)
20	1-3550	PIN, 3/16 x 1" Roll
21	5-3234	ASSEMBLY, Wheel Arm/Bearing (Left Hand)
22	3-3982	ROD
23	4-1516	WELDMENT, Front Wheel Arm
24	2-6676	SCREW, 5/16-18 x 29/32 Shoulder (3)
25	2-6257	WASHER, 17/32 Wave (3)
26	9-1247	NUT, 5/16-18 Hex Flange Center Lock (4)
27	2-6813	SHIELD, Trail


TRANSMISSION (DIFFERENTIAL)

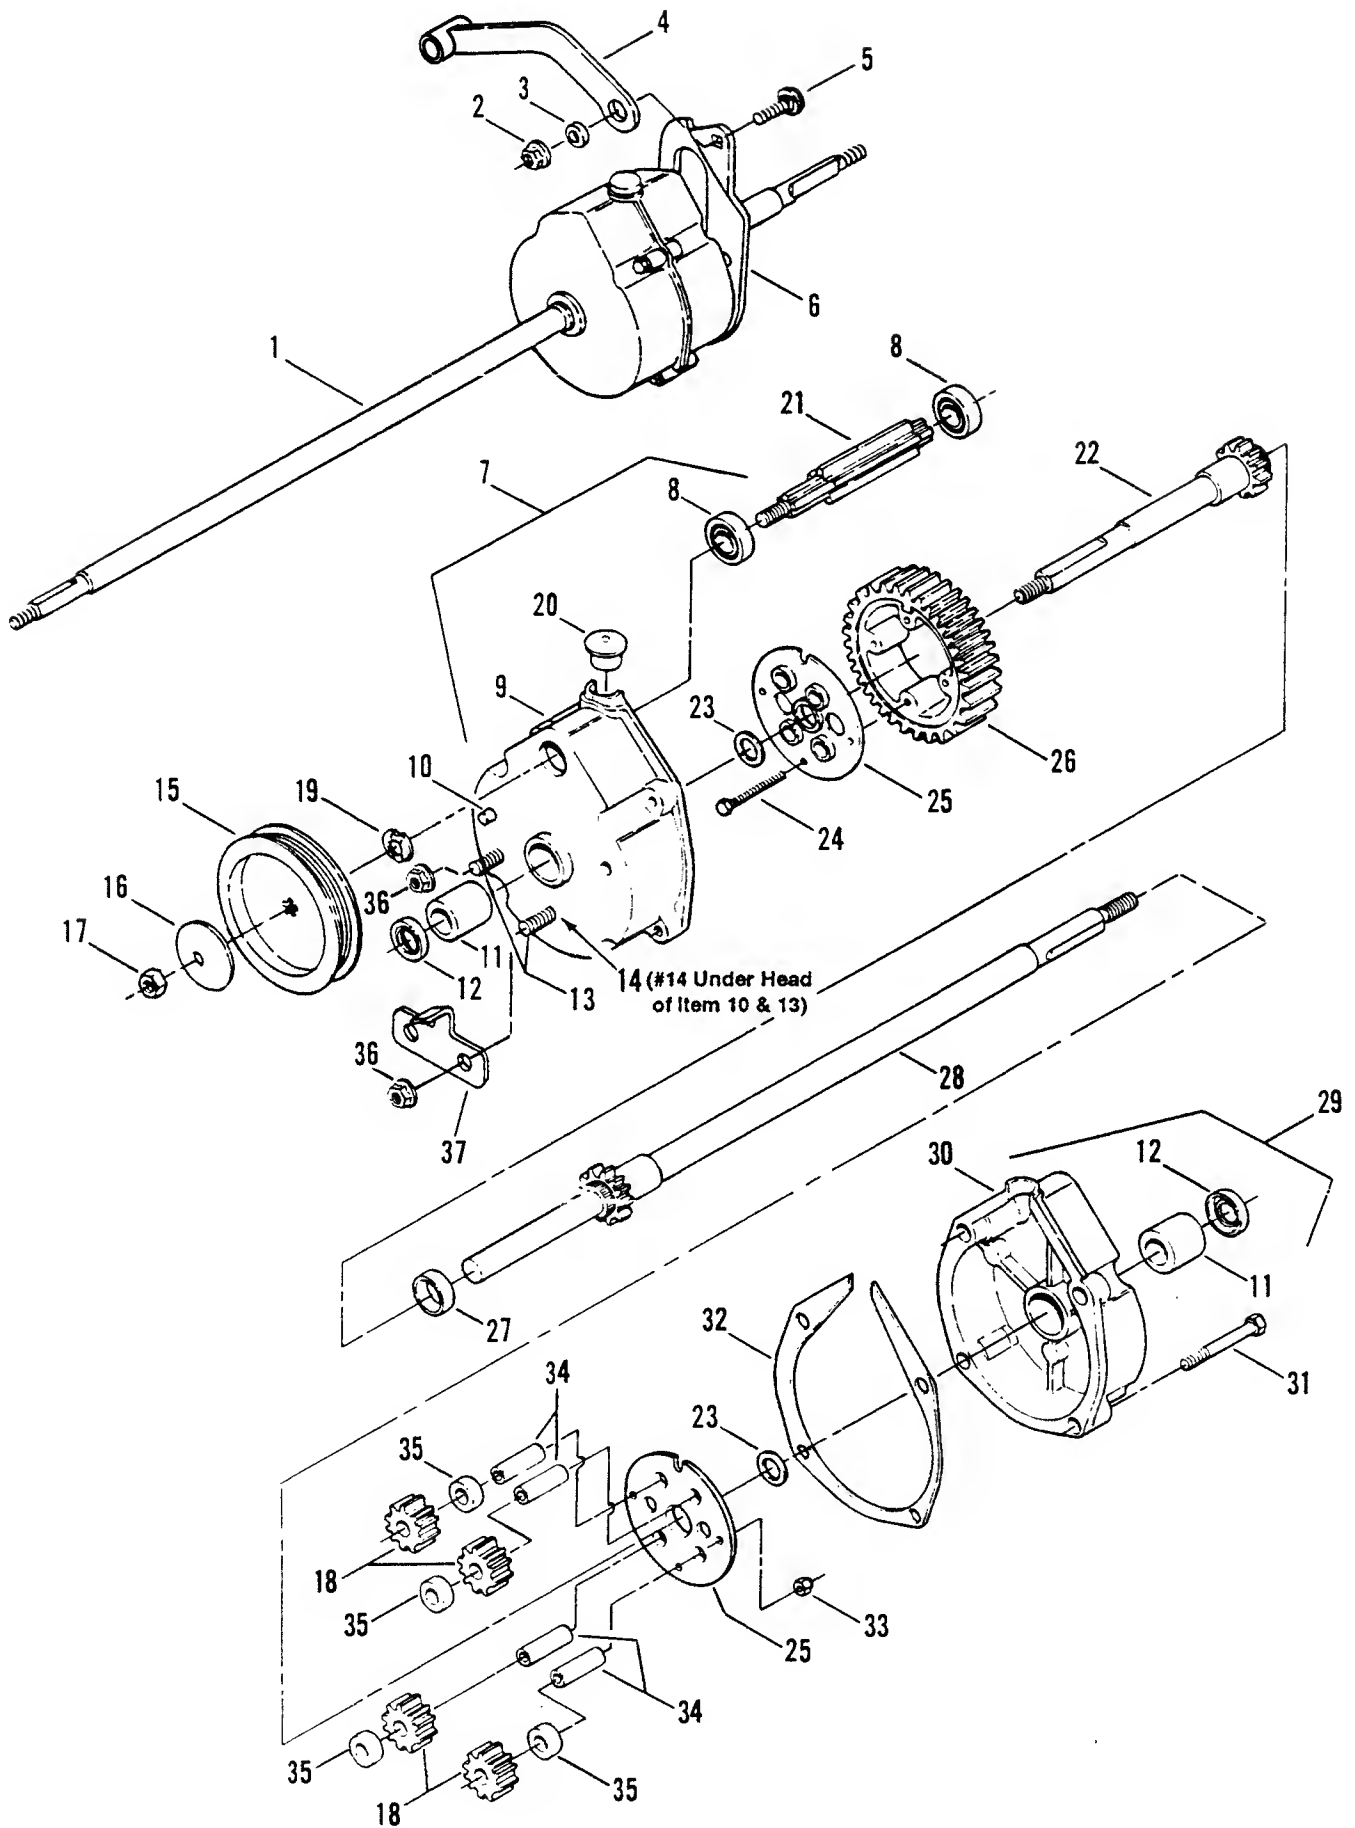

TRANSMISSION (DIFFERENTIAL)


ITEM	PART NO.	DESCRIPTION
1	5-2904	ASSEMBLY, Transmission (Includes items 20 & P.N. 5-3203)
2	9-0951	NUT, 5/16-18 Hex Flange Lock
3	1-3849	SPACER
4	4-1527	WELDMENT, Drive Pivot
5	9-1211	BOLT, 5/16-18 x 5/8" Flat Head Carriage
6	3-3672	BRACKET, Differential
7	5-3042	ASSEMBLY, Housing, Right Side (Includes item 8 thru 14)
8	1-1767	BEARING, Ball
9	1-7080	HOUSING, Right Side
10	2-6115	STUD, 5/16 Rib Neck
11	1-2507	BEARING, Differential (2)
12	1-2314	SEAL, 5/8 I.D. (2)
13	1-4858	SCREW, 5/16-24 x 1-1/8" Rib Neck (2)
14	2-4442	GASKET, 5/8 O.D. (3)
15	2-6512	PULLEY, Poly-V Belt
16	1-4263	WASHER, Spring
17	1-1201	NUT, 5/16-24 Hex Lock
18	2-1115	GEAR, Pinion (12 Teeth) (4)
19	1-1724	WASHER, Spring
20	1-6544	PLUG, Housing
21	5-0767	ASSEMBLY, Input Gear (Includes #1-1767 Ball Bearing)
22	5-2900	AXLE, Short
23	3-1965	WASHER, Thrust (2)
24	9-0557	SCREW, #10-32 x 1 1/2" Hex Head Cap (4)
25	3-1970	PLATE (2)
26	1-2495	GEAR, Differential (46 Teeth)
27	1-2543	SPACER, Axle Gear
28	5-2901	AXLE, Long
29	5-7634	ASSEMBLY, Housing, Left Side (Includes items 11, 12, & 30)
30	1-7015	HOUSING, Left Side
31	9-0911	SCREW, 1/4-20 x 1 1/4" Self-Tapping (4)
32	1-1774	GASKET, Housing
33	9-0376	NUT, #10-32 Hex Lock (4)
34	1-1110	SHAFT, Pinion (4)
35	1-2500	SPACER, Pinion Gear (4)
36	9-0585	NUT, 5/16-18 Hex Flange Lock
37	3-4044	GUIDE, Rear
--	5-0767	ASSEMBLY, Gear Input (Includes Items 8 and 21)

FRONT & REAR WHEELS

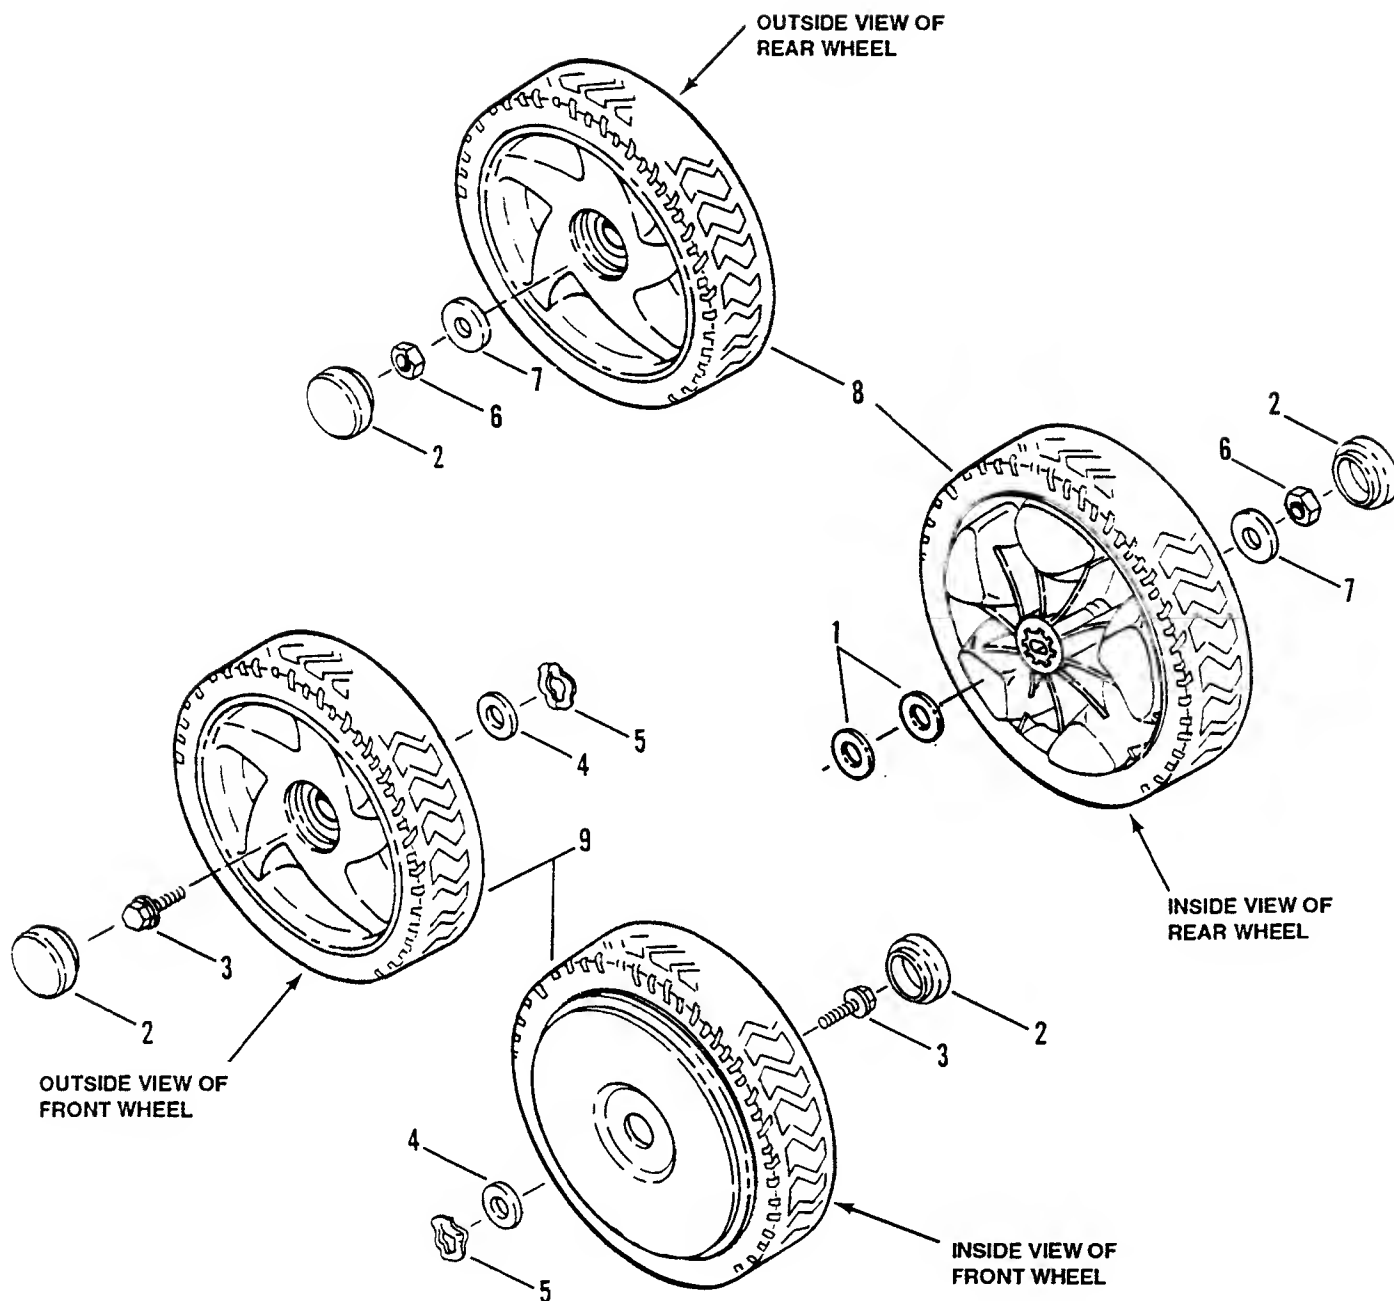

ITEM	PART NO.	DESCRIPTION
1	9-1220	WASHER, 9/16 x 1-1/16" O.D. Thrust (3)
2	2-4656	CAP, Hub (4)
3	9-0361	SCREW, 5/16-18 x 5/8" Self-Tapping (Front Wheels Only)
4	2-5074	WASHER, 17/32" Flat (Front Wheels Only) (4)
5	2-6257	WASHER, 17/32" Wave (Front Wheels Only) (4)
6	9-0377	NUT, 7/16-20 Hex Center Lock (Rear Wheels Only) (2)
7	3-1961	WASHER, 7/16 Flat (Rear Wheels Only) (2)
8	2-4553	ASSEMBLY, Wheel, 8.0 x 2.0 Plastic, Rear (2)
9	5-3198	ASSEMBLY, Wheel, 8.0 x 2.0 Plastic, Front (2)

GRASS BAG COMPONENTS



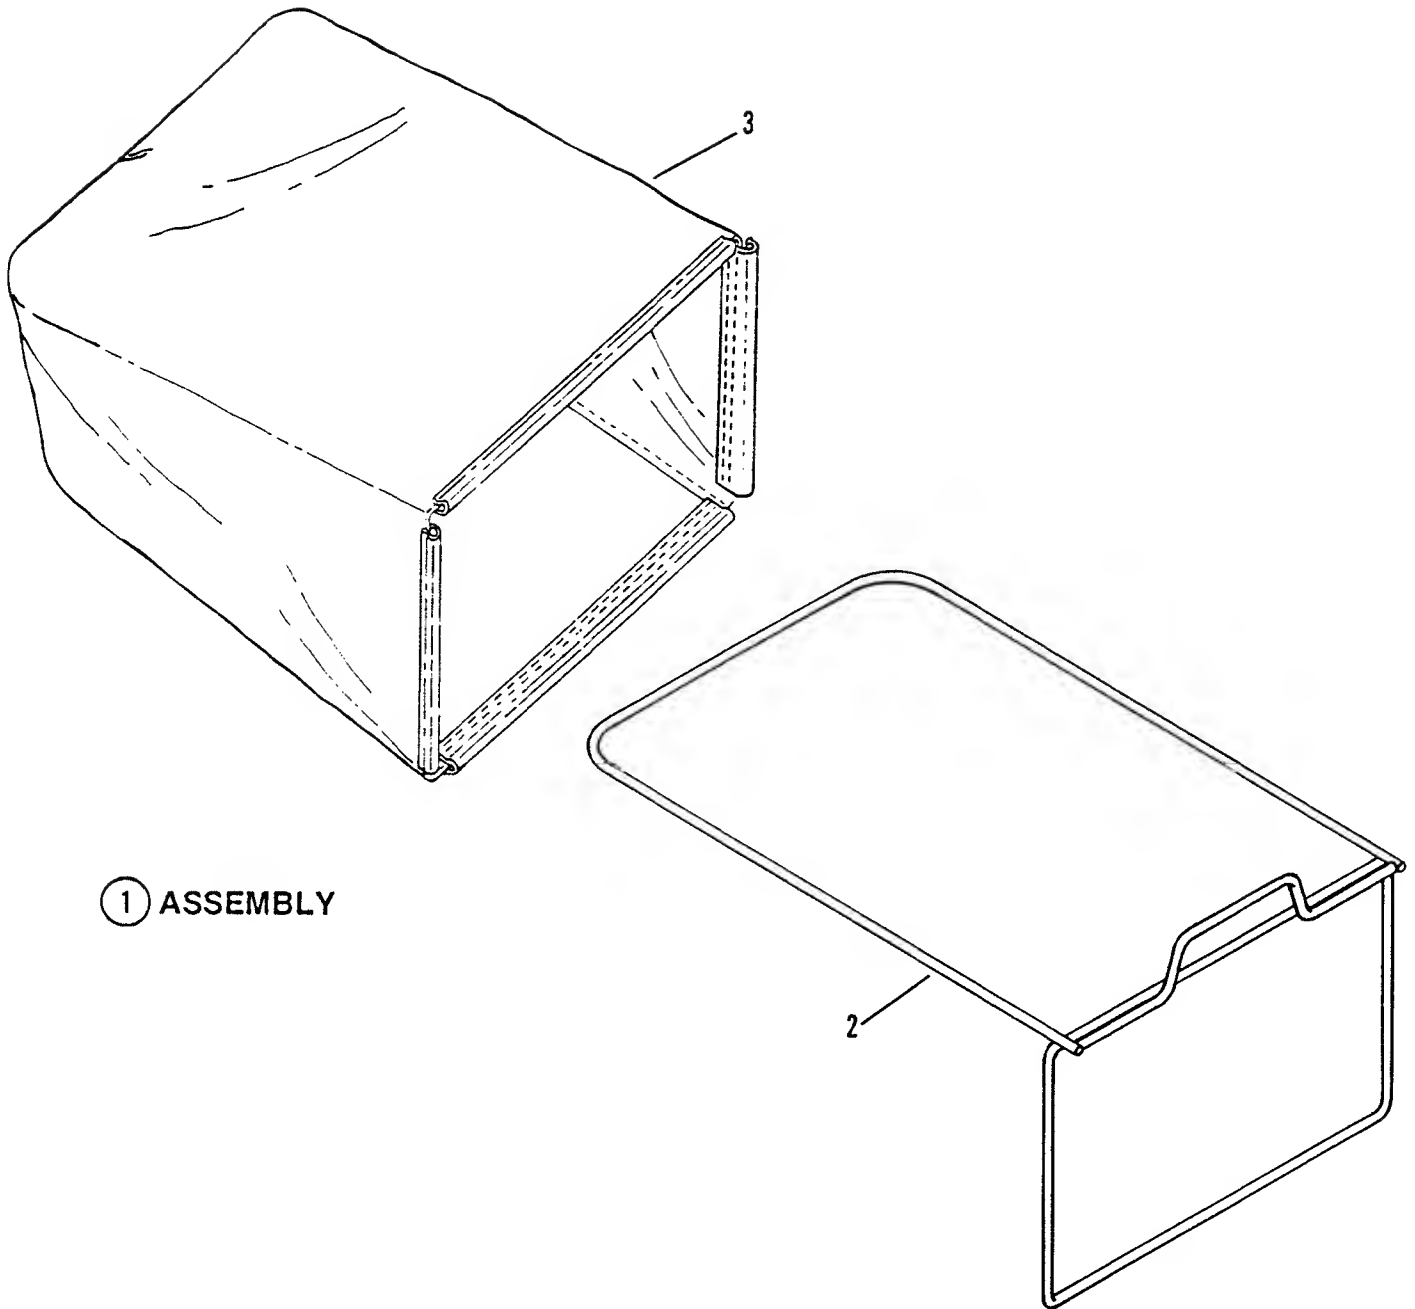


① ASSEMBLY

ITEM	PART NO.	DESCRIPTION
1	6-1241	KIT, Grass Bag (Includes Items 2 Thru 3)
2	2-7857	FRAME, Grass Bag
3	2-4528	BAG, Grass

DECALS


SNAPPER
MULCHING CONVERTIBLE

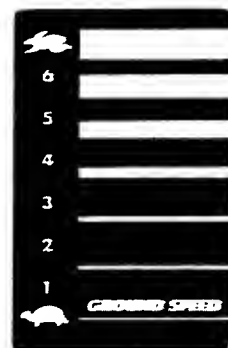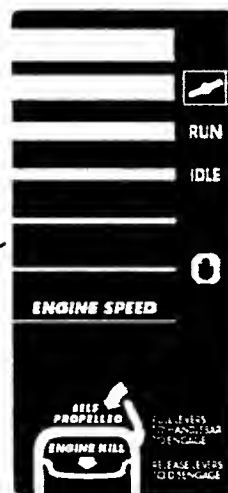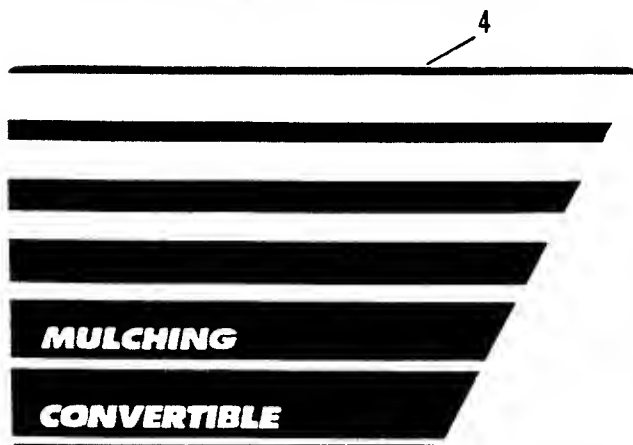

SIX SPEED
SELF-PROPELLED



SNAPPER

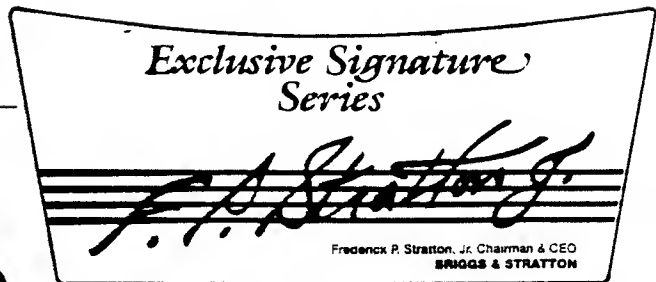


ITEM	PART NO.	DESCRIPTION
1	2-4218	DECAL, Briggs 5.5 Overhead Valve
2	2-6582	DECAL - SNAPPER, Nameplate (Mulching Convertible)
3	2-7873	DECAL, Signature
4	2-6561	DECAL, Mulching Convertible
5	2-6542	DECAL, Ground Speed
6	2-6543	DECAL, Engine Speed (Briggs Engine)
-	2-7413	DECAL, Engine Speed (Kawasaki Engine)
7	2-6541	DECAL, Quick Change Convertible
8	2-6713	DECAL, WARNING
9	2-6540	DECAL, Six Speed Self Propelled
10	1-3010	DECAL, DANGER
11	2-4984	DECAL, SNAPPER, Molded Logo (Chrome)
12	2-7432	DECAL, Engine 5 HP
13	2-6877	DECAL, Kawasaki Engine Start
14	2-6878	DECAL, OHV
--	2-6506	DECAL, Front Deck Stripe (Not Shown)
--	2-6507	DECAL, Deck Stripe, Left hand (Not Shown)
--	2-6508	DECAL, Deck Stripe, Right Hand (Not Shown)

PARTS BULLETIN

NEW PARTS FOR 21" SERIES 0 WALK BEHIND (REAR DISCHARGE) MODELS WITH ELECTRIC START ENGINES ONLY

NOTE: THESE PARTS WILL BE ADDED TO PARTS MANUAL #06193 AT A LATER DATE.

ITEM	PART NO.	DESCRIPTION
1	3-3933	BRACKET, Mounting
2	9-1235	SCREW, 1/4-20 x 3-1/2" Hex Head Cap (2)
3	9-1099	NUT, 1/4-20 Hex Center Lock (2)
4	9-0999	SCREW, 1/4-20 x 5/8" Self-Tapping (4)
5	1-1167	KEY, Switch (2)
6	1-5207	ASSEMBLY, Seal & Face Nut
7	2-3894	COVER, Switch
8	1-5206	NUT, 3/4-20 Lock
9	1-5205	SWITCH, Ignition
10	2-6689	HARNESS, Wiring
-	6-7012	KIT, Battery (includes items 12 Thru 14)
11	1-5488	HARNESS, Battery
12	4-3977	SCREW, M10-8 x 10mm Hex Head Cap (2)
13	9-0932	NUT, M10-8 Hex (2)
14	1-9763	BATTERY 12V

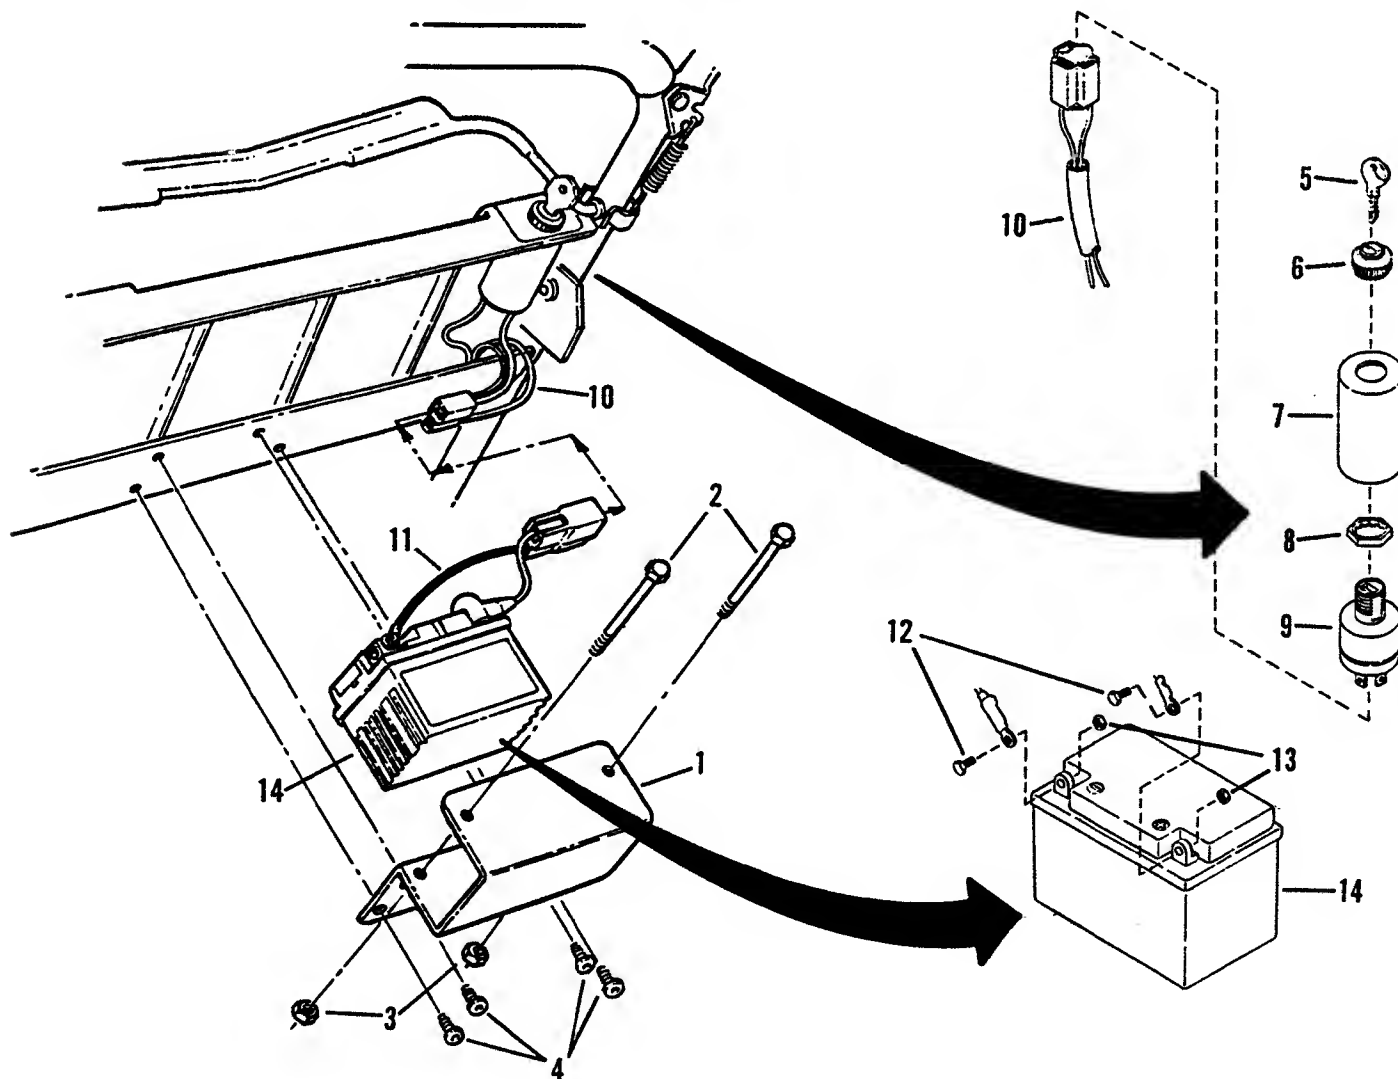

NOTES

This image shows a full page of blank white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page, providing a template for writing or drawing. There are no margins, text, or other markings present.

Parts Manual for

SNAPPER®

**21" REAR DISCHARGE
CAST ALUMINUM
(SINGLE POINT HEIGHT OF CUT)
XP21551V & XP21501KWV
SELF-PROPELLED MODELS
*SERIES 1**

SNAPPER® McDonough, GA., 30253 U.S.A.